INSTALLATION INSTRUCTIONS

Item#4159-172 (New. 02/06/2012)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware
3. Attach the mounting plate (A) to the junction box using screws (B) (Size: #8-32N*L0.5") as shown in **Fig. 2.** The side of the mounting plate marked "GND" must face out.

SUGGESTED INSTALLATION (Fig. 2)

4. Thread the tube (N) to nipple (O). Then slide the smooth side of the bar (M) into the hole of the housing (P) and thread the bar (M) to the arm (L). Then slide the smooth side of the short bar (R) to the hole of the housing (P) and thread the short bar (R) to the arm (S).
5. Determine the desired hanging height and thread rods (F1, F2, and F3) to coupling (Q). Pass the wires carefully through each rod as you assemble.
6. Place the canopy (C) over the rods (F) and thread the hanger ball (E) to the rods (F). Please remove the nipple if installing with one 6" rod only.
7. Lace the safety cable through the set screw assembly (to the desired length), and secure it to the ceiling joist. Then secure the cable by re-tighten the screws. Next attach the safety cable to the hanger ball with the screw provided.
8. Install the fixture body into the mounting plate (A) by tilting at a slight angle so that the hanger ball (E) slips into the mounting plate (A) as shown. Align the notch in the hanger ball (E) to the tab on the mounting plate (A) to prevent the fixture from turning.

CONNECTING THE WIRES (Fig. 3)

9. At this point, connect the electrical wires as shown in figure 3, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the ground wires from the hanger ball and mounting plate to it. Otherwise, connect the ground wire from the hanger ball directly to the mounting plate ground wire and secure with the wire connectors provided. After wires are connected, tuck them carefully into the ceiling junction box.

COMPLETING THE INSTALLATION (Fig. 1)

10. Align the canopy (C) over the mounting plate (A) and secure with screws (D).
11. Place glass shade (I), and metal cup (H) over the socket (K) and secure them with socket shell (G) using the tool (T) provided.
12. Install the bulb(s) (included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Fig. 1

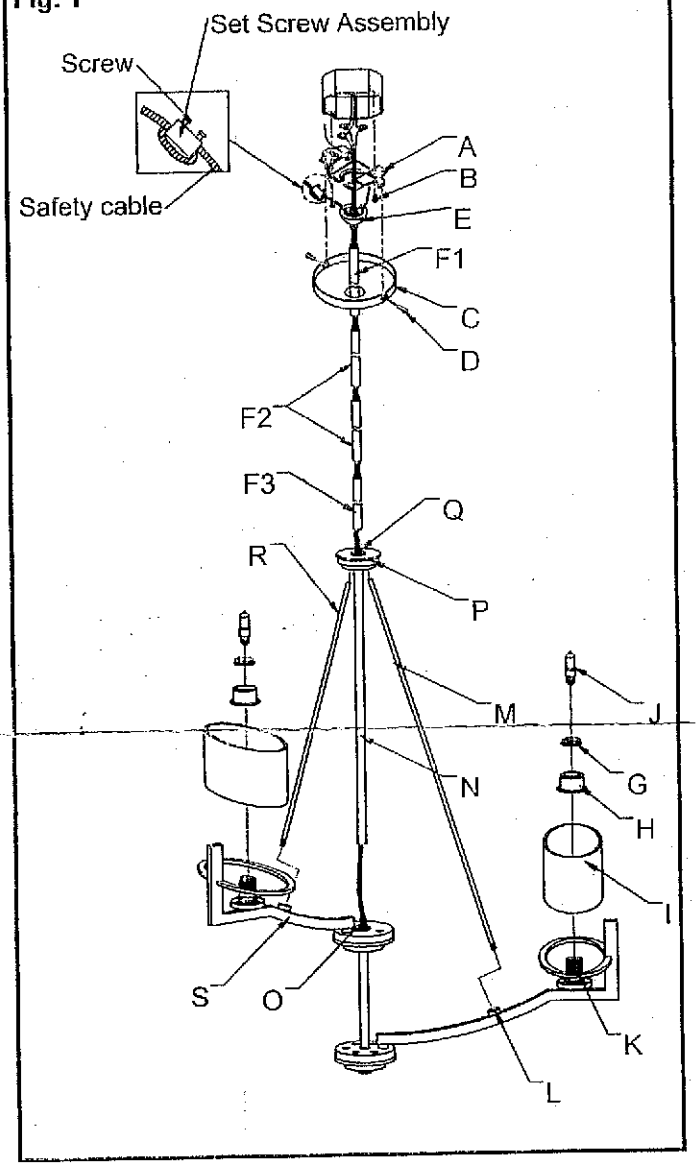

Fig. 3

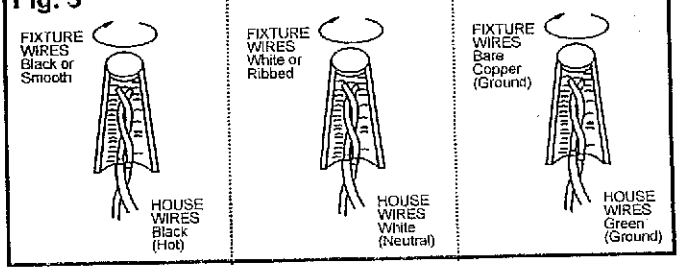
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green (Ground)

LA-2145E

Fig.2

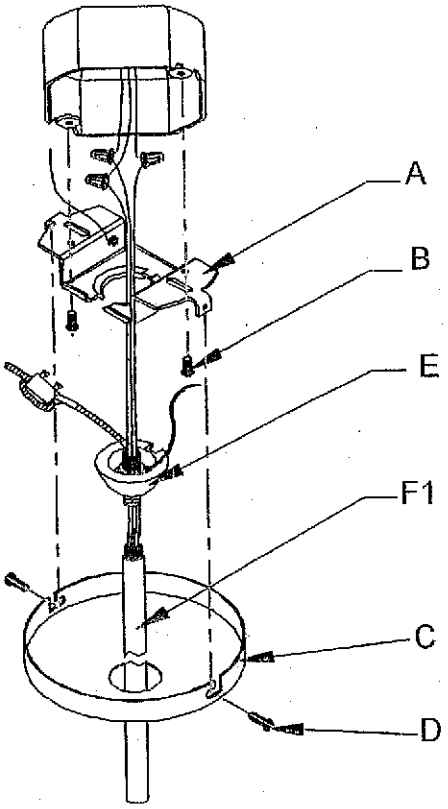

a. Hardware Bag:

A. Mounting Plate*1
C. Canopy*1
D. Screw*2
E. Hanger Ball*1

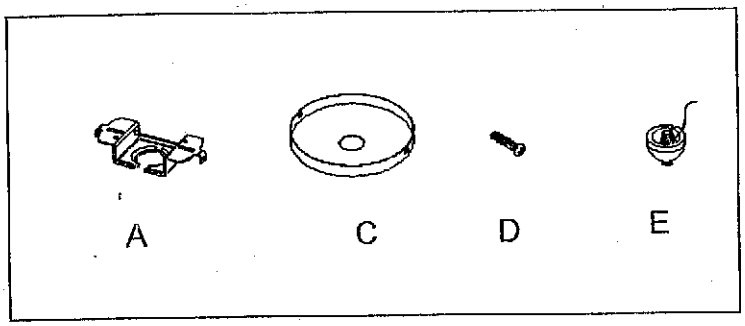

b. Hardware Bag:

F1. ROD 12"*1
F2. ROD 12"*2
F3. ROD 6"*1